

ALTO® Setting the date and time

Setting the time

1. Run the Alto terminal control (sometimes known as Alto Hardware controller).
2. If the window will not open
 - a. Look in the area next to the clock on the start bar
 - b. Click on the arrow pointing to the left (See example picture)
 - c. You should then see a small icon that looks like an Alto Clock
 - d. Double click on this icon and select “Show Main Screen”
3. Select the clock you want to change the date and time from in the list
4. Click on the configuration functions option.
5. Enter your password. The default password is “password” unless it has been changed.
6. Click on the set date and time button. Change the date and time if necessary (it is drawn from your computer’s date and time which may be wrong).
7. Now click on OK.
8. The new date and time is set.

